


## QuickChange Parallel Kits

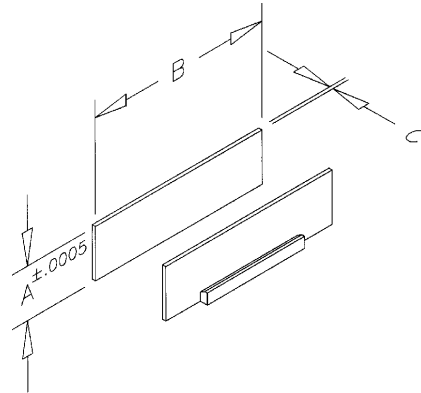

CONTAINS 1 PAIR PER SIZE


Vise Size	Part Number		Basic			B	C
	Basic	Advanced	A	A	A		
4"	QPS4000	QPS4001	.500	.500	1.000	3.980	.118
			.750	.625	1.125		
			1.000	.750	1.062		
			1.125	.875	1.190		
			1.190				
6"	QPS6000	QPS6001	.750	.750	1.375	5.980	.118
			1.000	.875	1.500		
			1.250	1.000	1.625		
			1.500	1.125	1.690		
			1.625	1.250			
8"	QPS8000	QPS8001	1.000	1.000	1.750	7.980	.118
			1.250	1.250	1.875		
			1.500	1.375	2.000		
			1.750	1.500	2.125		
			2.000	1.625			

- QuickChange parallels are designed to be used with the QuickChange master jaws shown on page 185.
- Individual QuickChange parallel sets available on page 185.
- QuickChange Starter Package available on page 188.

## QuickChange Individual Mill Angles



- QuickChange mill angles are designed to be used with the QuickChange master jaws (page 185).
- QuickChange mill angle parallel set is available on page 187.
- QuickChange starter package is on page 188.

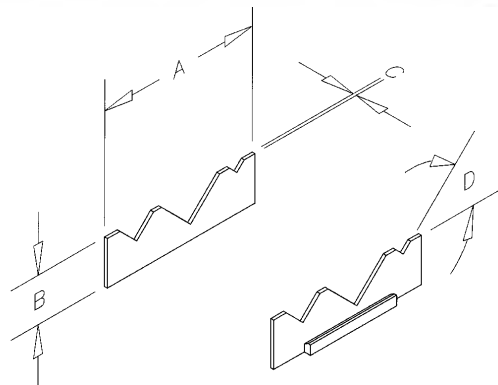

*Sold as individual units*

Vise Size	Part Number Individual	A	B	C	(Degree) D
4"	QMA4020	4.000	1.240	.118	20
	QMA4025				25
	QMA4030				30
	QMA4035				35
	QMA4040				40
QMA4045	45				
6"	QMA6020	6.000	1.740	.118	20
	QMA6025				25
	QMA6030				30
	QMA6035				35
	QMA6040				40
QMA6045	45				
8"	QMA8020	8.000	2.230	.118	20
	QMA8025				25
	QMA8030				30
	QMA8035				35
	QMA8040				40
QMA8045	45				